

Serial No.

H-V031-E-8

## **Diaphragm Valves Type 15**

User's Manual




### Contents

 
(1) Be sure to read the following warranty clauses of our product	1
(2) General operating instructions	2
(3) General instructions for transportation, unpacking and storage	3
(4) Name of parts	4
(5) Working pressure vs. temperature	6
(6) Specification of limit switch	7
(7) Installation procedure	7
(8) Connection of limit switch procedure	8
(9) Operating procedure	9
(10) Adjustment procedure for stopper	10
(11) Diaphragm replacement procedure	11
(12) Inspection items	12
(13) Troubleshooting	12
(14) Handling of residual and waste materials	12

## ASAHI YUKIZAI CORPORATION



### (3) General instructions for transportation, unpacking and storage

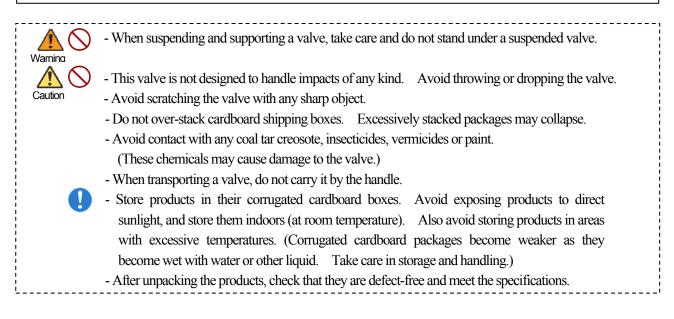




# (4) Name of parts

ASAHIAV

#### Nominal Size: 125, 150mm (5", 6")

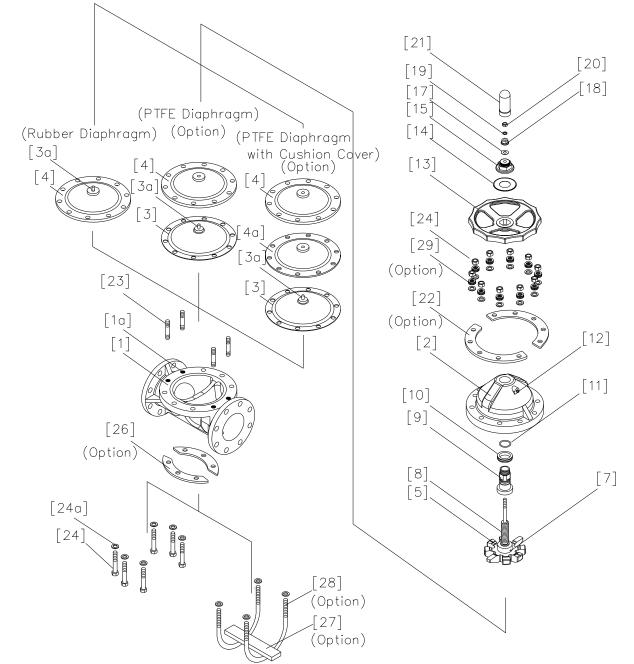


No.	DESCRIPTION	No.	DESCRIPTION	No.	DESCRIPTION
[1]	Body	[9]	Sleeve(A)	[20]	Nut
[1a]	Inserted Nut	[10]	Thrust bearing(A)	[21]	Gauge cover
[2]	Bonnet	[11]	O-ring (A)	[22]	Bonnet liner
[3]	Diaphragm	[12]	Grease Nipple	[23]	Stud bolt nut
[3a]	Inserted metal of DIA	[13]	Hand wheel	[24]	Bolt•Nut
[4]	Cushion	[14]	Name Plate	[26]	Body liner
[4a]	Cushion cover	[15]	Сар	[27]	Rib liner
[5]	Compressor	[17]	Sheet ring	[28]	U-bolt•nut
[7]	Compressor Pin	[18]	Stopper	[29]	Conical spring washer
[8]	Stem	[19]	Spring washer		

[22], [26], [27], [28], [29] are used with special specification.



### Nominal Size: 125, 150mm (5", 6") with Limit Switch (Option)

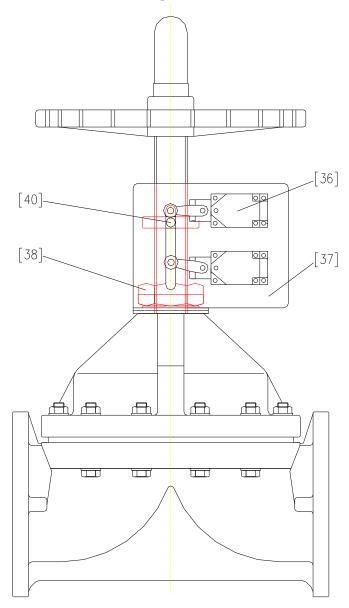

No.	DESCRIPTION	No.	DESCRIPTION
[36]	Limit Switch	[38]	Nut (A)
[37]	Bracket (A)	[40]	Limit Switch Rod



Diaphragm Valve Type 15

### ASAHI YUKIZAI CORPORATION

Distributor

http://asahi-yukizai.co.jp./en/

Information in this manual is subject to change without notice.